


Art. 20

Curva 90° a saldare

Welding 90° bend

Coude 90° à souder

Schweissbogen 90°

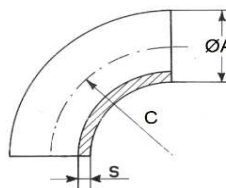

DN	10	15	20	25	32	40	50	60	65	80	100	100
A	12	18	22	28	34	40	52	60	70	85	101,6	104
C	26	35	40	50	55	60	70	75	80	90	110	100
S	1,5	1,5	1,5	1,5	1,5	1,5	1,5	1,5	2	2	2	2
PN	25	25	25	25	25	25	25	16	16	16	16	16

INCH	1"	1 1/2"	2"	2 1/2"	3"	4"
A	25,4	38,1	50,8	63,5	76,2	101,6
C	38,1	57,2	76,2	95,2	114,3	110
S	1,5	1,5	1,5	1,5	2	2
PN	25	25	25	16	16	16


Art. 25

Curva 45° a saldare

Welding 45° bend

Coude 45° à souder

Schweissbogen 45°

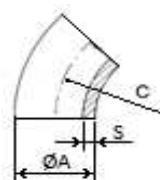

DN	10	15	20	25	32	40	50	60	65	80	100	100
A	12	18	22	28	34	40	52	60	70	85	101,6	104
C	26	35	40	50	55	60	70	76,2	80	90	110	100
S	1,5	1,5	1,5	1,5	1,5	1,5	1,5	1,5	2	2	2	2
PN	25	25	25	25	25	25	25	16	16	16	16	16

INCH	1"	1 1/2"	2"	2 1/2"	3"	4"
A	25,4	38,1	50,8	63,5	76,2	101,6
C	38	57	75	84	96	110
S	1,5	1,5	1,5	1,5	2	2
PN	25	25	25	16	16	16


Art. 17

Curva 180° a saldare

Welding 180° bend

Coude 180° à souder

Schweissbogen 180°

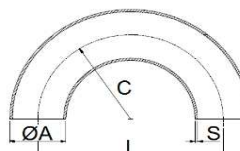

DN	10	15	20	25	32	40	50	60	65	80	100	100
A	12	18	22	28	34	40	52	60	70	85	101,6	104
L	52	70	80	100	112	126	146	152	172	184	220	220
C	26	35	40	50	56	63	73	76	86	92	110	110
S	1,5	1,5	1,5	1,5	1,5	1,5	1,5	1,5	2	2	2	2
PN	25	25	25	25	25	25	25	16	16	16	16	16

INCH	1"	1 1/2"	2"	2 1/2"	3"	4"
A	25,4	38,1	50,8	63,5	76,2	101,6
B	65	85	110	115	130	150
C	38,9	57,2	76,2	84	96	110
S	1,5	1,5	1,5	1,5	2	2
PN	25	25	25	16	16	16